

Essential Mirror Signature Mirror

Installation Details




SUNCOAST
WINDOWS

Quality . Style . Innovation


CONCEALED FIX FRAME - TILE SUPPORTS

FIX SCREWS AND WALL CLIPS INTO THE PLASTERBOARD AND PREFERABLY INTO A TIMBER STUD. THEN CLIP THE FRAME ONTO CLIPS. SECURE SCREWS AND CLIPS AT MINIMUM 450mm CENTRES WITH A MINIMUM OF 4 CLIPS PER MIRROR (2 TOP & 2 BOTTOM). THEN SILICONE SEAL PERMETRE IF POSSIBLE.

SCREW FIXING

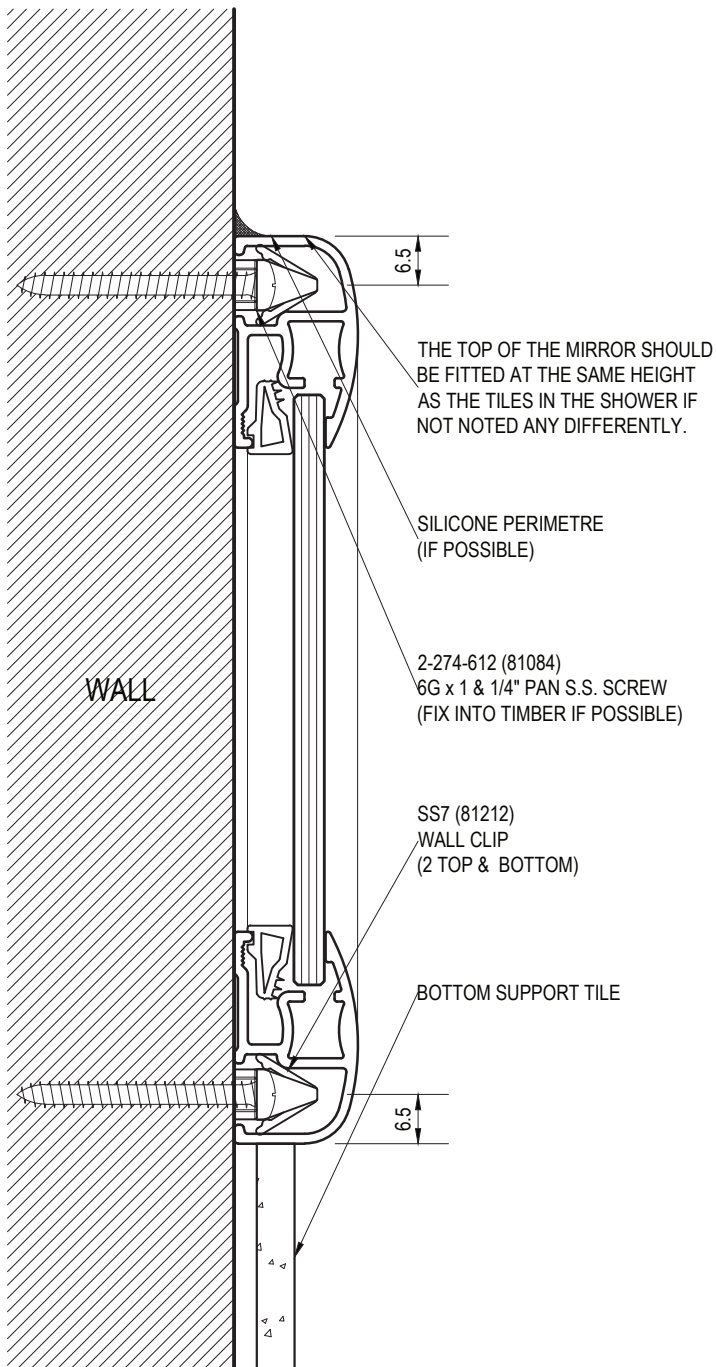

TAPE FIXING

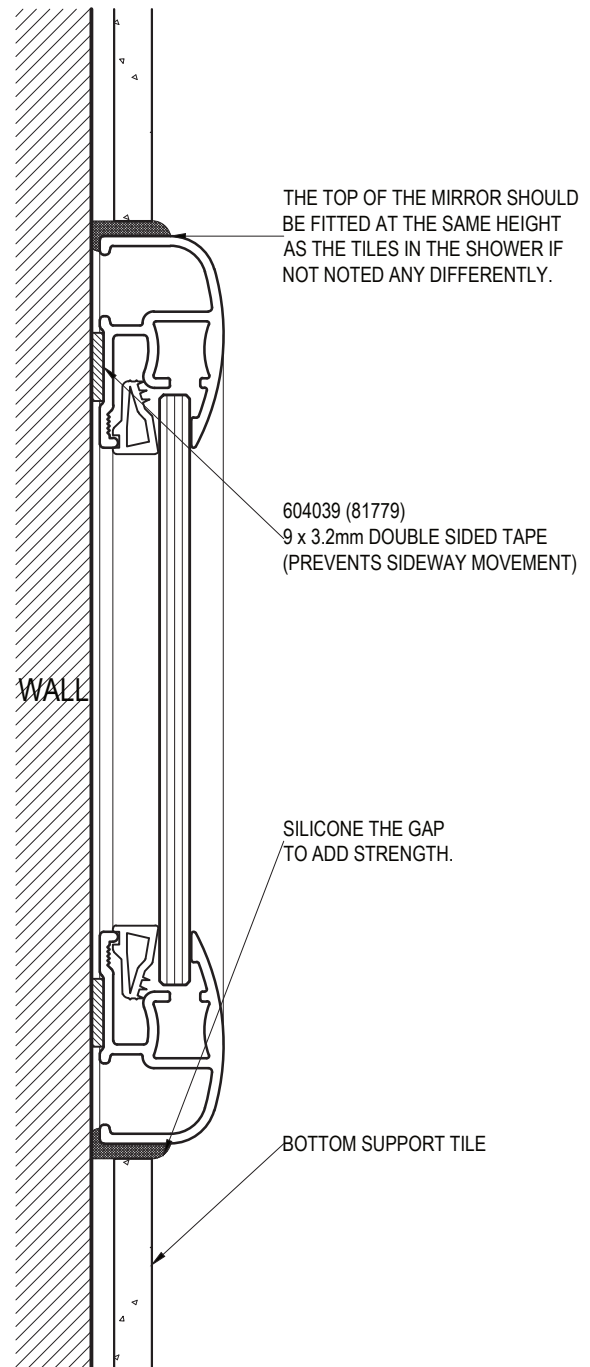

PRODUCT NO: ESS Mirror DATE: 22/04/13

DRAWING NO: MIRR-05-01 ISSUE: B


DRAWN: DJH SCALE: 1:1

Suncoast Windows and Doors Pty Ltd ABN 78 010 409 819 © 2013 All rights reserved.


CONCEALED FIX FRAME - NO TILE SUPPORTS

FIX SCREWS AND WALL CLIPS INTO THE PLASTERBOARD AND PREFERABLY INTO A TIMBER STUD. THEN CLIP THE FRAME ONTO CLIPS. SECURE SCREWS AND CLIPS AT MINIMUM 450mm CENTRES WITH A MINIMUM OF 4 CLIPS PER MIRROR (2 TOP & 2 BOTTOM). THEN SILICONE SEAL PERMETRE IF POSSIBLE.

SCREW FIXING

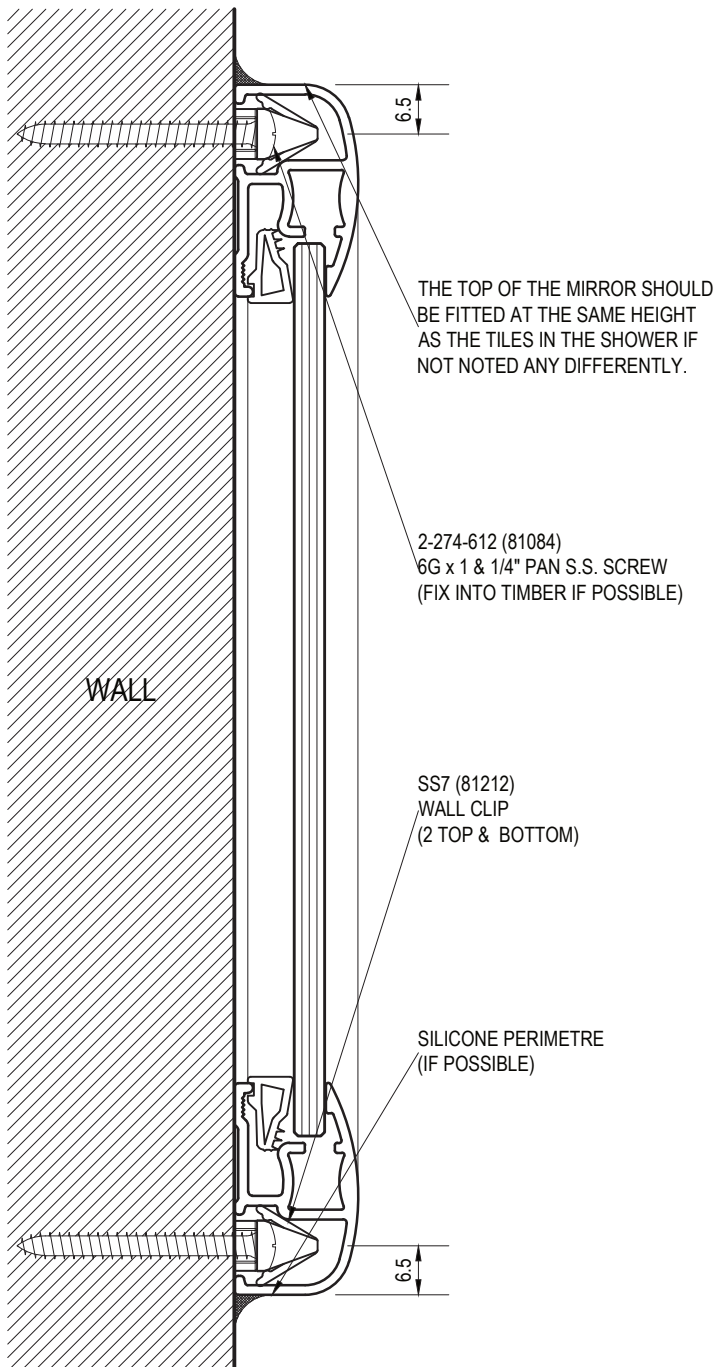

TAPE FIXING

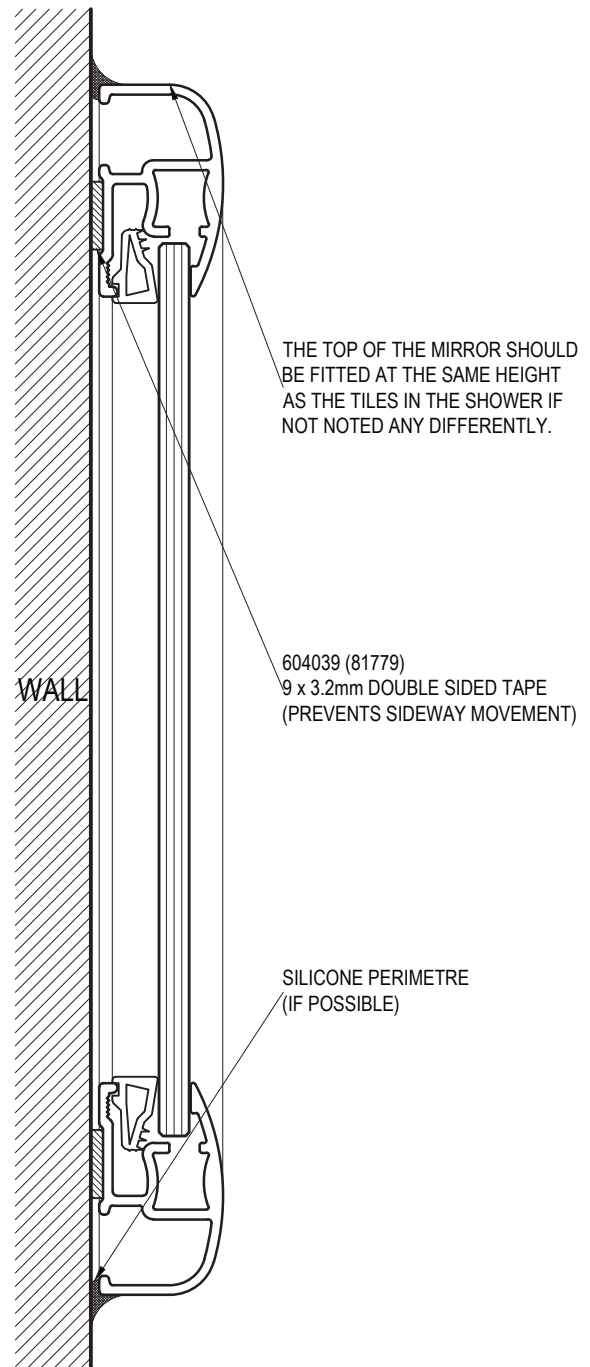


PRODUCT NO: ESS Mirror DATE: 22/04/13

DRAWING NO: MIRR-05-02 ISSUE: B

DRAWN: DJH SCALE: 1:1


Suncoast Windows and Doors Pty Ltd ABN 78 010 409 819 © 2013 All rights reserved.

MITRE CUT FRAME

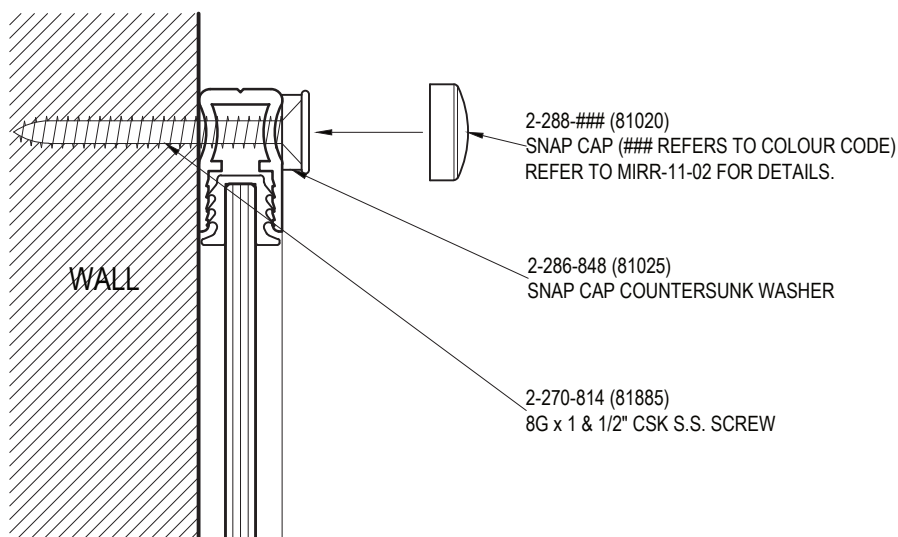

FIX SCREWS INTO PLASTER BOARD, USE SNAP CAPS TO HIDE FIXINGS.
SECURE SCREWS AT 800mm CENTRES MAXIMUM ALONG ENTIRE FRAME.

SQUARE CUT FRAME

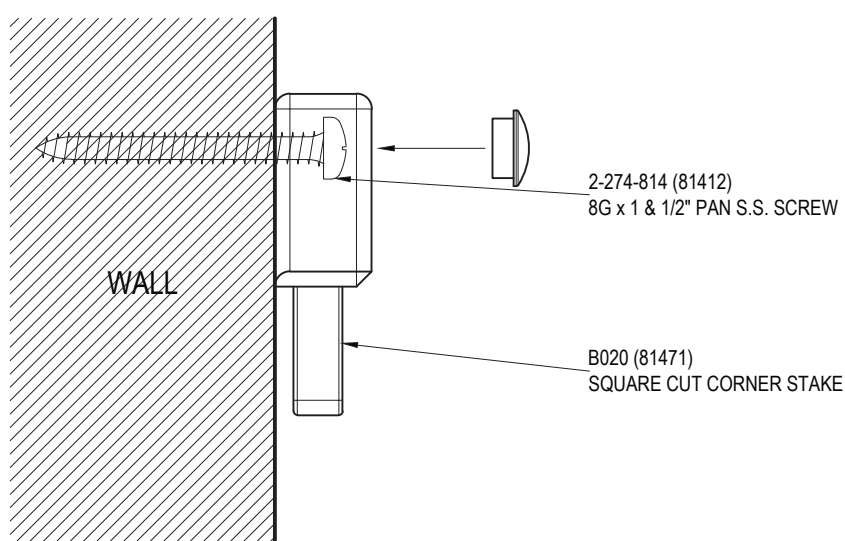

FIX SCREWS INTO PLASTER BOARD, USE WALL PLUGS INTO
BRICK BEFORE SECURING SCREW. PLACE CAP ON CORNER.

PRODUCT NO: ESS Mirror

DATE: 22/04/13

DRAWING NO: MIRR-05-03

ISSUE: B

DRAWN: DJH

SCALE: 1:1

Suncoast Windows and Doors Pty Ltd ABN 78 010 409 819 © 2013 All rights reserved.